

## Madero 750

### SPECIFICATION

#### FEATURES



- Wall Hung vanity: 750Lmm x 470Dmm x 550Hmm
- Hand-made and finished.
- E-1, non toxic, moisture resistant MDF board
- Strength and durability created through reinforced internal structure
- Two spacious drawers fitted with quality metal drawer runners and hinges.
- Single tap hole suited for styled mixers as standard.
- 80-100mm plumbing space behind drawer.

#### TOP/BASIN OPTIONS

- Overflow protection.
- White ceramic basin top.

Note: Mirrors, Wastes and Tapware not included.

Vanity By Design vanities include a 5 year warranty on cabinets and tapware and 12 month warranty on tops, basins, mirrors, mirror shelves and mirror cabinets.

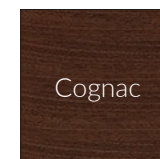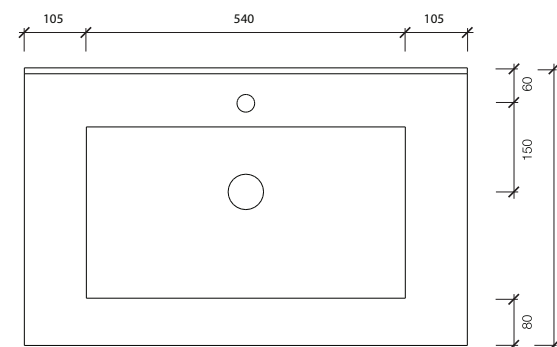

#### PLUMBING NOTE

Plumbing fixtures must be installed by a qualified plumber (waste not supplied). Vanity must be installed by a qualified tradesperson. Failure to do so may void the warranty.

#### CAUTION

Components may be heavy and require two people to lift. Do not stand or sit on vanity.

#### ENQUIRIES

[www.vanitybydesign.com.au](http://www.vanitybydesign.com.au)

**BRISBANE  
SYDNEY**

241 Monier Road, Darra Qld 4076 /Tel: 07 3376 6055  
Unit 6.02/75 Mary St, St Peters NSW 2044 /Tel: (02) 9550 4987



## INSTALLATION

1. Unpack all components and remove packaging material.
2. Locate and mark the wall studs in the wall directly behind where the vanity is to be fitted. Subtract the height of the cabinet and top from the desired overall height; this gives you the height to the underside of the cabinet from the floor.
3. Mark a line on the wall at the height of the bottom of the cabinet and screw the supplied blocks of wood to the wall on the lower side of this line. These blocks of wood are for the cabinet to sit on so it is preferable that they be screwed directly to the wall stud. Note: make sure the timber blocks will not be visible from the sides when vanity is installed.
4. Drill holes through the back of the cabinet for the screws to go through, it is preferable for these holes to line up with the wall studs as it is this fixing point that carries the majority of the weight of this unit.
5. Lift the cabinet only to sit on the blocks of wood. Removing the drawers from the cabinet will make this easier; however, some help may be required. While holding the cabinet in place, screw through drilled holes using appropriate sized screws to fix the cabinet to the wall.
6. Once the cabinet is securely fastened to the wall and you are happy with the location, you can proceed to installing the bench top/basin and plumbing.
7. Fit rubber bumpers to the top of each corner of the vanity. For added strength, you can add silicone around the bumpers.
8. Place the top/basin onto the vanity.
9. To seal the top and basin to the vanity, run a bead of silicone around the joins.
10. Fit rubber bumpers to the inside corners of the drawers.



### PLUMBING NOTE

Plumbing fixtures must be installed by a qualified plumber (waste not supplied).  
Vanity must be installed by a qualified tradesperson.  
Failure to do so may void the warranty.

### CAUTION

Components may be heavy and require two people to lift.  
Do not stand or sit on vanity.

### ENQUIRIES

[www.vanitybydesign.com.au](http://www.vanitybydesign.com.au)

**BRISBANE  
SYDNEY**

241 Monier Road, Darra Qld 4076 / **Tel:** 07 3376 6055  
Unit 6.02/75 Mary St, St Peters NSW 2044 / **Tel:** (02) 9550 4987